



① When you use ATX PSU , Please use four #6-32 screws to fasten the ATX adaptor plate to the power supply. (As left photo 1. 2.)




③ Please install the above assembly unit into the frame and fasten it by four #6-32 screws ( As left photo 3. 4.)

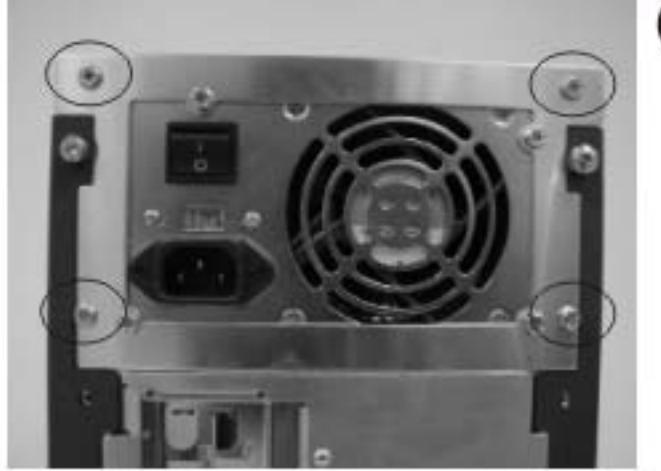


3

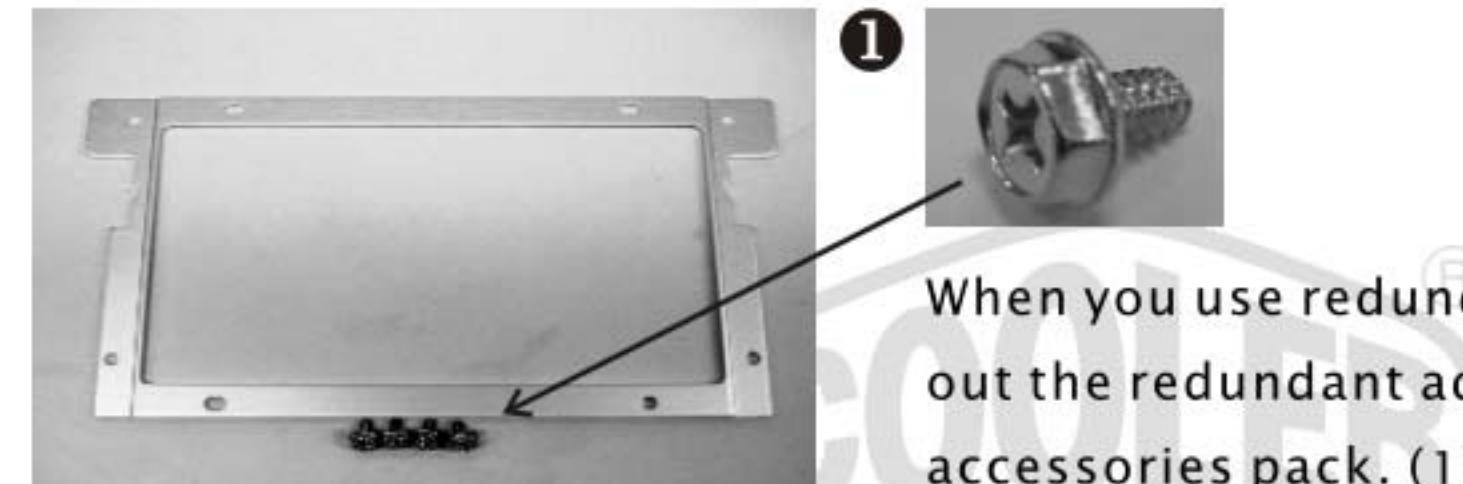


When you use redundant PSU , Please take out the redundant adaptor plate from the accessories pack. (1).

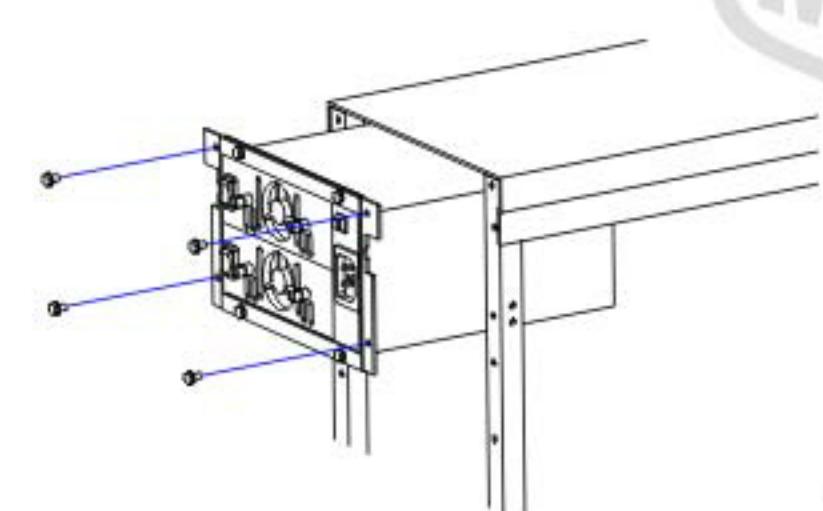

② Please install the above assembly unit into the frame and fasten it by four #6-32 screws (As left photo 2. 3.)

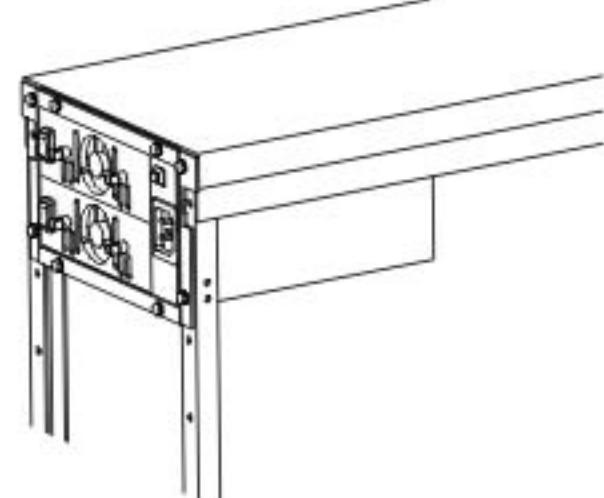


③

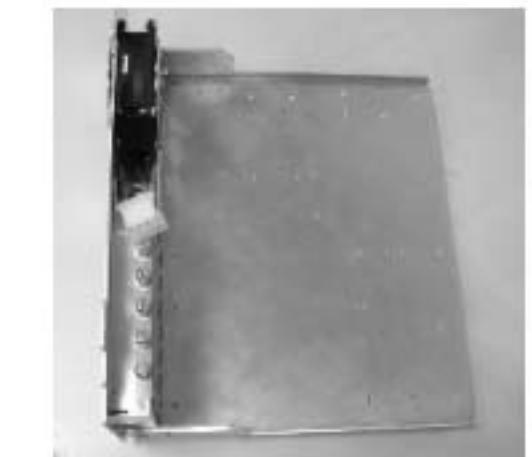


① (P/W 3\*6 Screws) , ( Hexagon Screws)  
Left photo is MB tray, which has been fixed twenty four stand-off.




② As Left photo shown, There are eight holes need to be fasten to the MB tray. (It's possible that the MB tray will be able to fit on P4 423) .

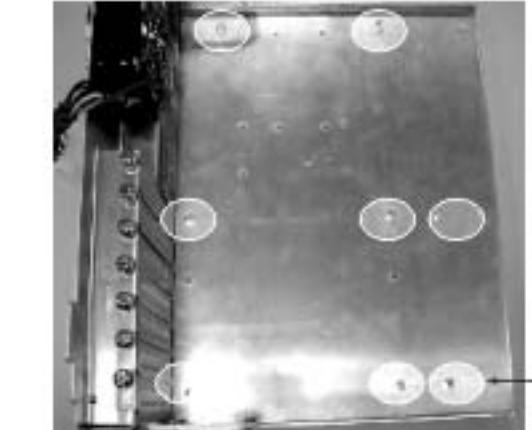

③ Please select the opposite hole location from MB and fasten eight hexagon screws on the MB tray ( As left photo shown ).

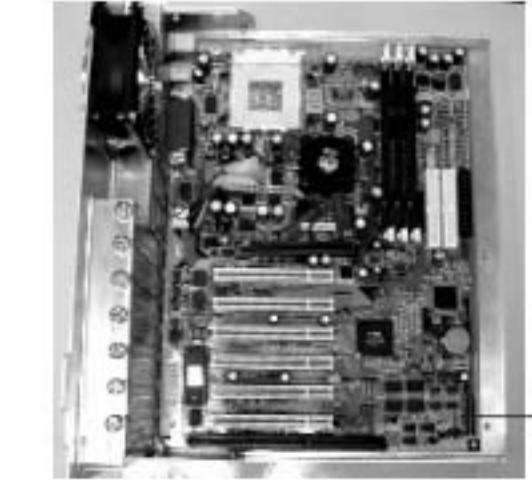


④ Please use eight P/W 3\*6 screws to fasten motherboard on the MB tray.( As left photo shown )

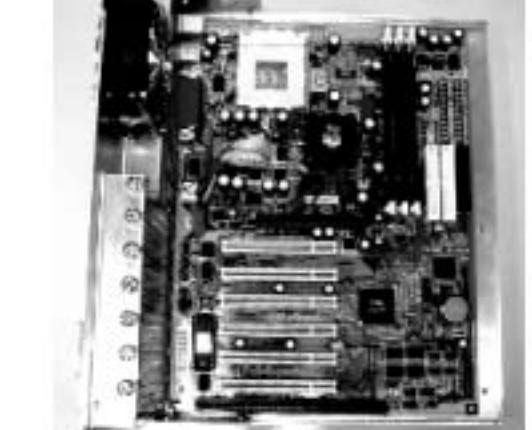


⑤ Assembly has been finished as left photo.

1


## How To Assemble The Top Fan

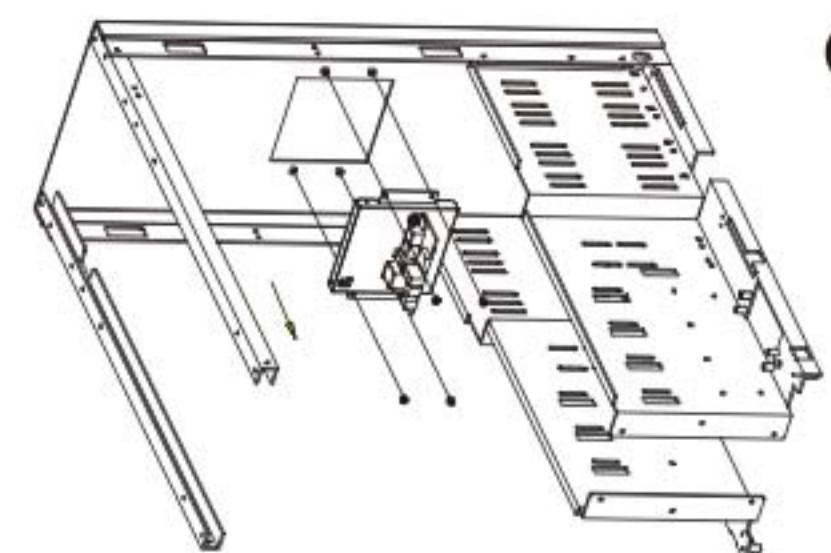


① Remove screws from the usb module.

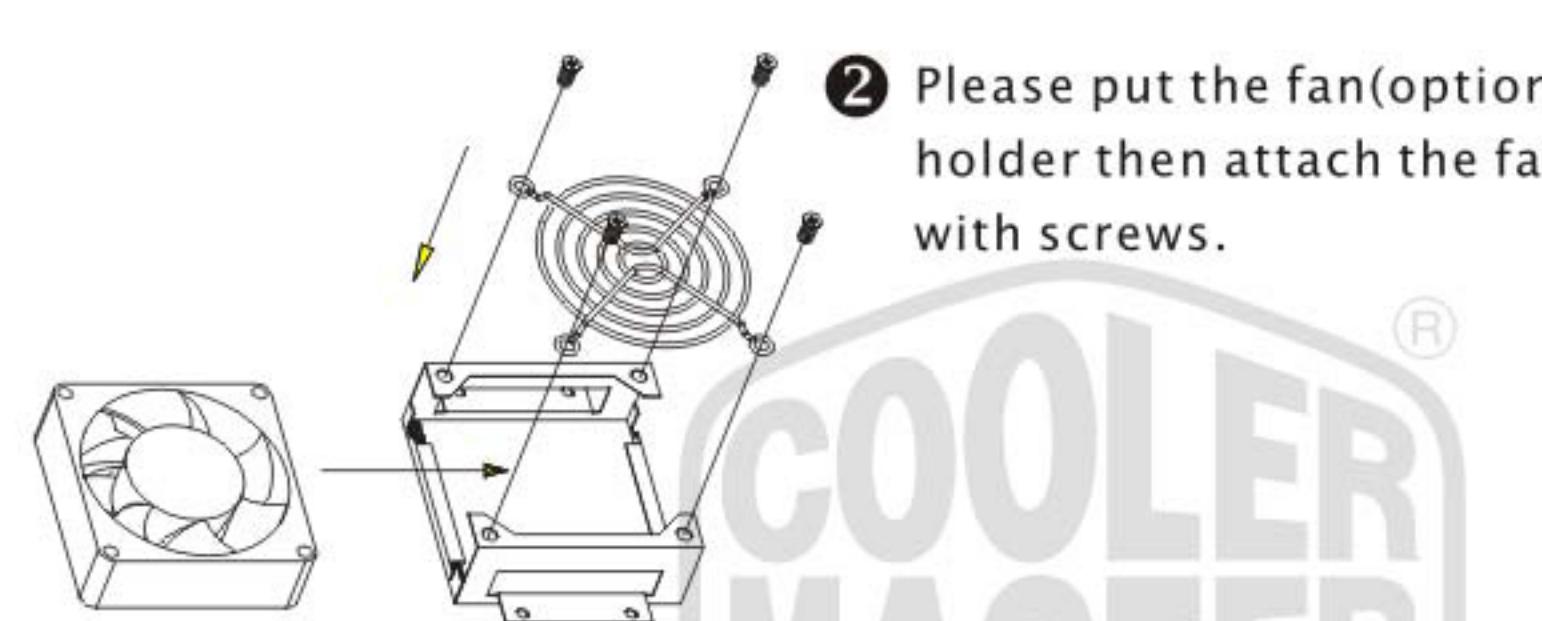



② Please put the fan(option) into the fan holder then attach the fan guard(option) with screws.

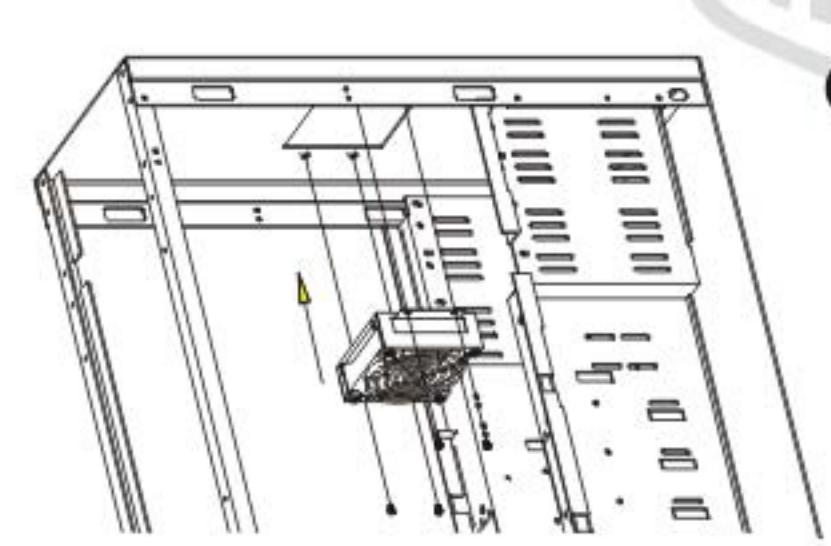

③ Please fix the fan holder with chassis.

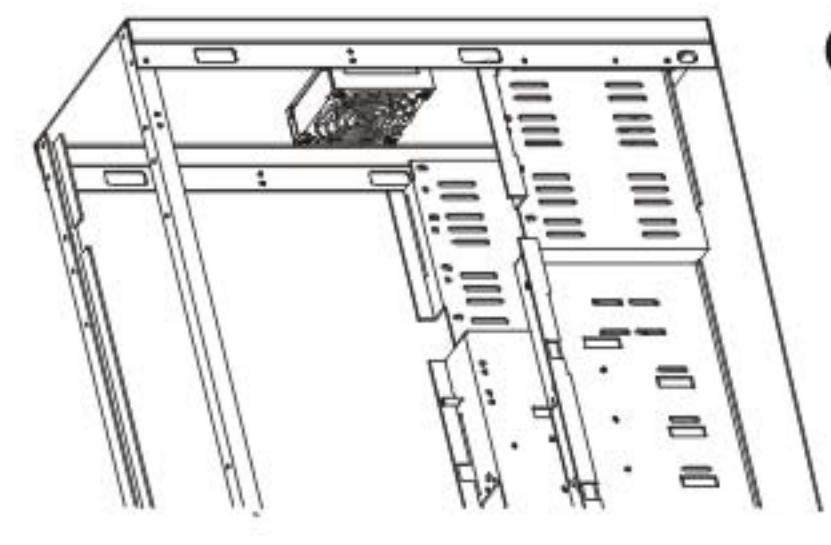

④ Finished.

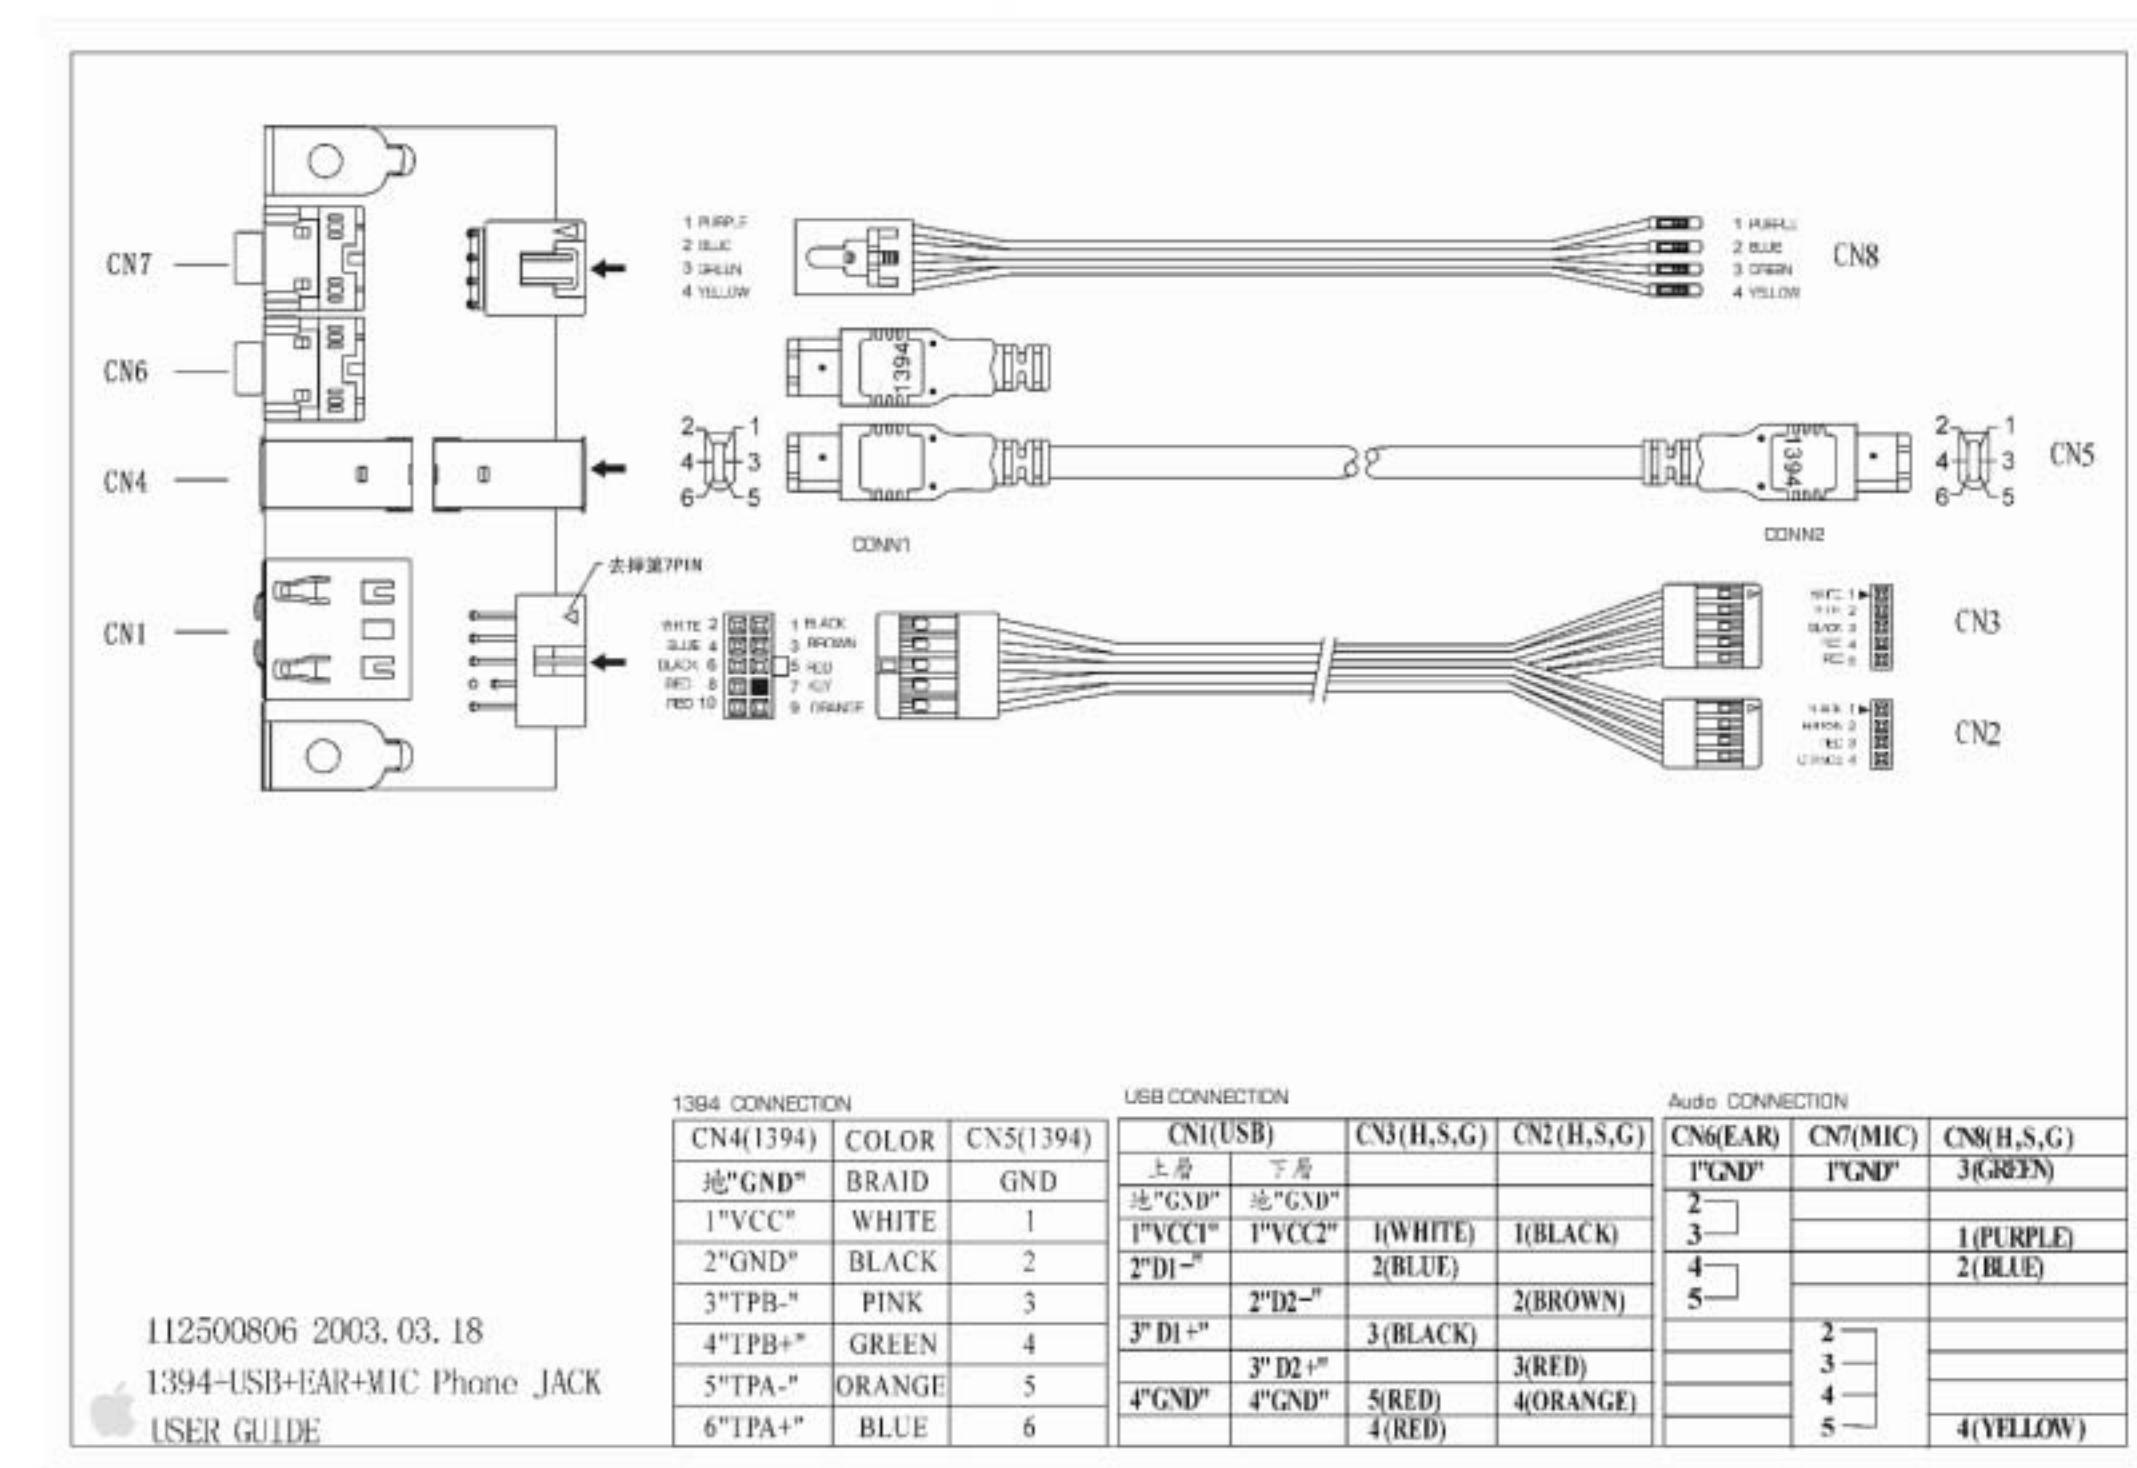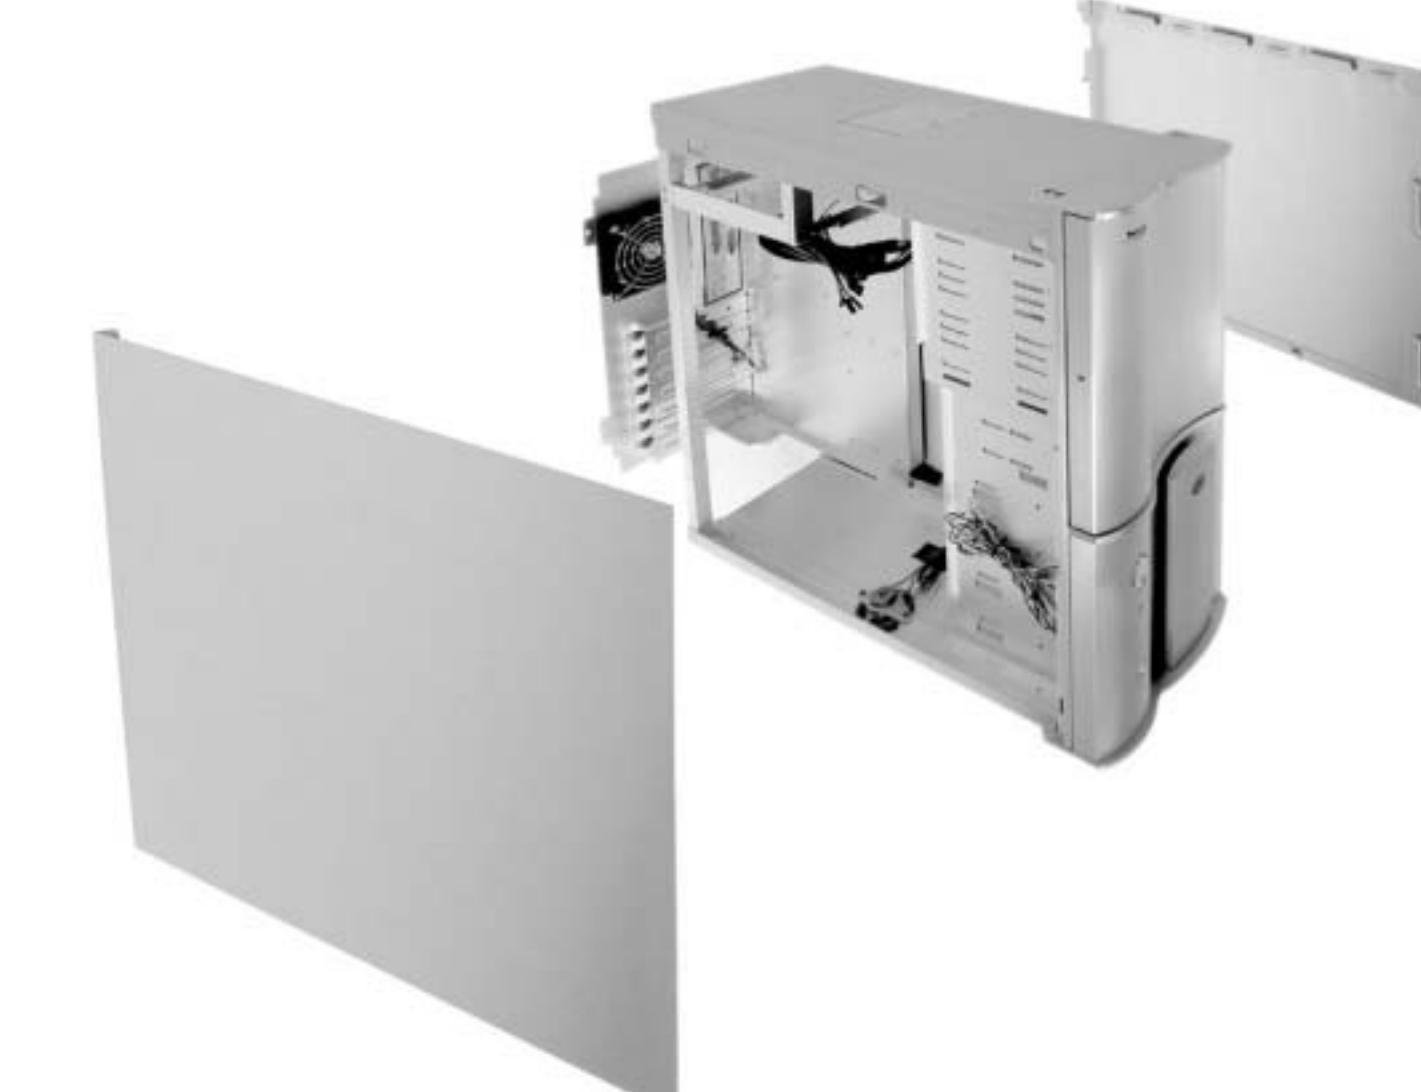

4

## USER MANUAL

## INDEX

ATX PSU Installation Guide.....	1
PS II Redundant PSU Installation Guide.....	2
ATC MB Tray Installation Guide.....	3
How To Assemble The Top Fan.....	4
Others.....	5

**Masterpiece in Case Design** TAC-T01  
**COOLER**  
**MASTER**